



Disassembling Canon EOS Rebel XS Back Cover

This guide will help you remove the back panel of the camera where all the buttons and LCD screen are attached.

Written By: Daniel Bussone



INTRODUCTION

Use this guide to replace a dysfunctional back cover.

TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

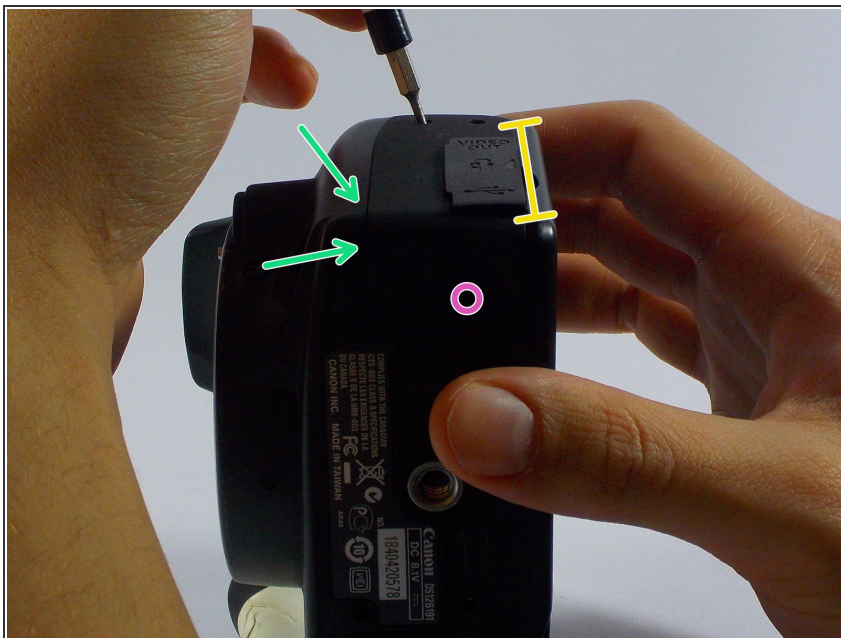


- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Back Cover



- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

 Step 4

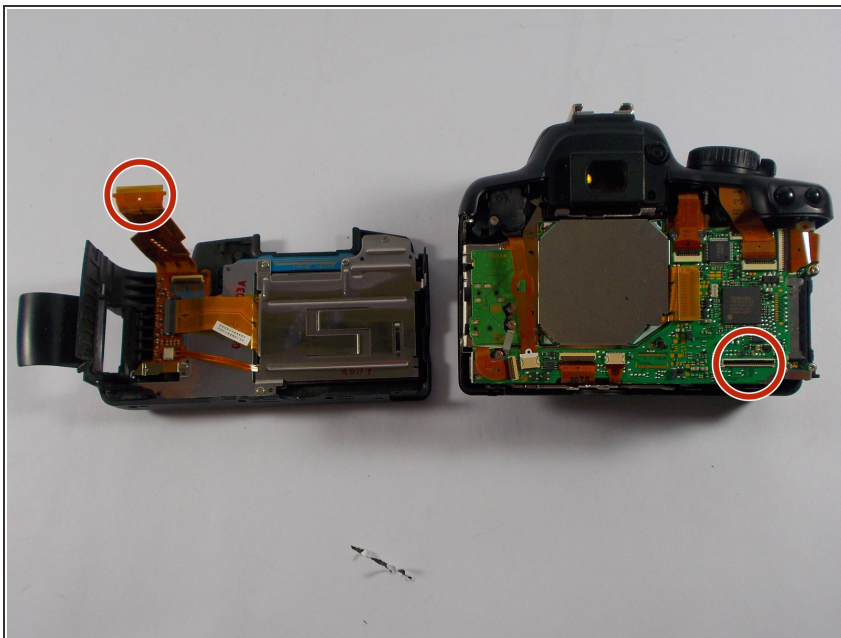

- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 12:02:27 AM.